



®

### ASSEMBLY TIPS FOR THE WILDERNESS TRAIL BIKES GOOSER

Before assembling The Gooser, remove the top from the tube of Goose Grease. Tamp down the crimped end of the tube on a flat surface to bring any air that might be trapped in the grease to the surface. Then squeeze the tube until all excess air has been expelled and the grease comes to the top of the tube. Screw the Gooser Adaptor onto your tube of Goose Grease. Fill the Gooser Adaptor with grease. Use your finger to create some back pressure while letting the air blow out of the smaller opening you've created. While holding the tube and adaptor in one hand and the grease gun head in the other, squeeze the tube to fill the depression inside the grease gun head, then screw the two together.

Now pump the plunger four or five times until the grease expels from the tip. Intermittent grease flow indicates that air is still present in the Gooser, and it may be necessary to squeeze the tube while pumping the plunger. This last step also works if your gun loses its prime.

Grease your Grease Guard Components often to check for contamination and always after exposure to moisture. If the grease is runny or discolored, purge until fresh, clean grease is expelled from the bearings.

Thanks Goosers!

WILDERNESS TRAIL BIKES, INC.,  
134 REDWOOD AVENUE,  
CORTE MADERA, CA 94925  
PHONE 415 924-9632  
FAX 415 924 9640